QKL-B1H











產品特色 Features

- ◆ 大流量 High Flow
- ◆ 精度高 High Precision
- ◆ 靈敏度高 High Sensitivity

產業應用 Industrial application

- ◆ 雷射切割 Laser Cutter
- ◆ 洩漏測試 Leak Tester
- ◆ 張力控制 Tension Control
- ◆ 吹瓶機產品成型 PET bottle molding machine
- ◆ 多段壓力控制 Multi-Stage Pressure Control

產品敘述 Product Description

此系列大流量比例閥為一個閉迴路的電子壓力調節設計,係由兩個電磁閥、壓力傳感器以及電子 迴路控制所組成。根據類比訊號的輸入,由一端電磁閥用來控制進氣量,與另一端電磁閥來控制排氣量,再透過壓力傳感器測得壓力並回饋於電子迴路控制,以達到精確的壓力控制。

我們的比例閥輸入信號及監控訊號皆提供了 0-10VDC(電壓) 與 4-20mA(電流) 及 RS485 ModBus 通訊可選擇。此款比例閥為業界少有的低壓力且流量大,最大流量可達 5600L/min(200 scfm),廣泛應用於各種產業。

This series is a complete closed loop servo system consisting of two solenoid valves, an internal pressure transducer, and electronic controls. Based the input of analog signal, the solenoid valve on one side is used to control the air intake, another side is used to control the air exhaust. Then the pressure is measured by the sensor and fed back to the electronic circuit control to reach precise pressure control.

The input signal and command signal of our proportional flow control valve all provide 0-10VDC, 4-20mA or RS485 ModBus communication to select. This proportional valve is unique in the industry with low pressure and large flow, with a maximum flow of 5600L/min (200 scfm), and is widely used in various industries. All our products have CE, SGS, RoHS certification with ISO13485 quality system.

QKL-B1H




產品規格 Specifications

系列 Type	B1H	
輸入訊號 Input Signal	0-10V / 4-20mA / RS485	
輸出壓力 Output Range	1-120 psi	
輸入最大壓力 Supply Pressure Max	9 bar (131 psi)	
監控信號 Monitor Output	0-10V / 4-20mA / RS485	
工作電源 Supply	DC24V (<u>≤</u> 4W)	
響應時間 Response	1S	
介質 Medium	潔淨壓縮空氣或搭配 5μm 過濾器 Clean compressed air or with 5 μm filter	
重複精度 Repeatability	±0.25% F.S.	
遲滯 Hysteresis	±0.25% F.S.	
線性度 Linearity	±0.3% F.S.	
綜合精度 Accuracy	±0.3% F.S.	
靈敏度 Sensitive	0.1bar	
流量 Flow Rate	5600L/min @ 8bar	
使用溫度範圍 Temp. Range(Operating)	0 ~ 70 °C (0 ~ 158 °F)	
牙口 Port Size	G 1/2"	
底座材質 Manifold Material	鋁合金 Aluminum	
接液材質 Wetted Materials	鋁合金、不鏽鋼、丁晴橡膠 Aluminum, Stainless steel, NBR	
電氣連接 Electrical Connection	M12 電氣端子(2m) M12 Connector(2m)	
固定架材質 Mounting Bracket Material	鍍鋅鋼板 Galvanized steel	
防護等級 Ingress Protection	IP 65	
重量 Weight	1600 g	

型號選擇 Ordering Code

4 - 20 mA

RS485 Modbus

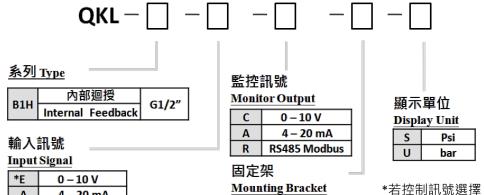

M M type


*若控制訊號選擇 0-10V,請留意最小的驅動電流為 3mA。 For Command Signal type 0-10V, the minimum driving current is 3mA.






外觀尺寸 Overall Dimension

♦QKL-B1H

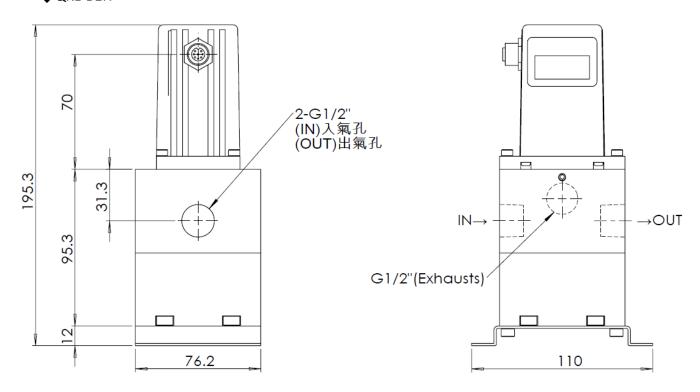

接線方式 Wiring Description

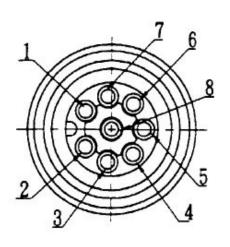

編號 No.	顏色 Color	功能 Function	
1	藍色 Blue	電源(-)	24V DC Power (-)
		類比訊號(-)	Command (-)
		監控輸出(-)	Output monitor (-)
2	棕色 Brown	電源(+)	24V DC Power (+)
3	黑色 Black	監控輸出(+)	Monitor output (+)
4	白色 White		0-5 V Command (+)
		類比訊號(+)	0-10 V Command (+)
			4-20 mA Command (+)
5	灰色 Gray	RS485(D-)	
6		-	
7	-		-
8	紅色 Red		RS485(D+)

※此接線圖為線材公座俯視圖
The wiring diagram shows from top view

▲警告:當安置完成信號線後,切勿旋轉拉扯插頭,以避免內部傳感器受到損害,造成產品功能異常或故障。

Warning: Do not rotate the connection socket when connected, to avoid damage to the internal sensor.

QKL-B1H



產品注意事項



安裝

比例閥可安裝任意方向,低壓控制建議垂直安裝。該閥後端需有至少40cc以上之容積,避免比例閥壓力控制不穩定。



配管前的處置

配管前請進行空氣吹拭(氣流沖洗)或清洗,以去除管內的切削粉、切削油、雜物等。

止洩帶的纏法:配管及接頭鎖緊時,不要讓配管螺牙的切削粉、止洩帶進入閥內部。使用止洩帶時,留下螺牙 1.5-2 牙距的位置進行纏繞。



使用環境注意事項

- 1. 請勿在腐蝕性氣體、化學藥品、海水環境或附著上述物質的場所使用
- 2. 水、水蒸氣、灰塵等會附著本體的場所,容易從排氣孔、電磁閥排氣孔、內藏調壓閥的排氣孔進入本體內部,水分與灰塵等進入,是造成故障的原因之一。
- 3. 日光照射的場合,請用保護罩等遮蔽。
- 4. 周圍有熱源的場合,請遮斷輻射熱。
- 5. 會附著水滴、油及焊渣的場所,請採取適當的保護對策。



使用流體供給源注意事項

- 1. 適用於壓縮空氣、氧氣、氫氣、氮氣、氫氣...等惰性氣體。
- 2. 壓縮空氣中內含化學藥品、有機溶劑的合成油、鹽分、腐蝕性氣體等時,是造成作動不良的原因,請避免使用。
- 3. 當流體為氧氣時,就伴隨著重大、通常情況下難以考慮到的危險性。但是,可以對故障災害和經濟損失進 行風險管理和控制。因此,請接收具有安全資格的專家的支持,請由具備充足知識和經驗的人員進行操作。
- 4. 氧氣是可以助燃的氣體。摩擦生熱、靜電釋放等都可能造成起火,並使金屬盒密封材料發生燃燒。因此, 請安裝合適的過濾器,以防止金屬屑和塵埃的侵入。
- 5. 在靠近本產品的供給側,請安裝空氣過濾器。過濾精度應選 5 μm 以下。
- 6. 含大量冷凝水的壓縮空氣是造成本產品或其他氣動元件動作不良的原因。請設置後冷卻器、空氣乾燥器、 冷凝水收集器等進行對策。
- 7. 由空壓機產生的碳粉多的話,會附著在本產品內部,成為動作不良的原因。
- 8. 對於可能會發生意外的場合,請考慮火災、爆炸,設計終止氧氣供應的迴路,實施安全措施。
- 9. 本產品的排氣通口,請根據氧氣排放場所的具體情況做適當的排氣配置。
- 10.本產品不能用作緊急關閉裝置。應在系統中安裝冗余安全系統,以防止嚴重傷害或生命損失。



保固

自出廠起 12 個月以內為保固期限,請務必遵守使用注意事項,因人為因素造成的產品不良,則本公司對本保修不 承擔任何責任。

QKL-B1H



Product Precautions



Installation

The valve can be mounted in any position. For very low pressure control, works best when mounted upright. And Ensure a minimum closed end volume of 40c.c. to allow proper functioning.



Preparation Before Piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

Wrapping of Sealant Tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping. When sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



Operating Environment

- 1. Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, or where there will be contact with the same.
- 2. In locations where the body is exposed to water, steam, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH port, solenoid valve EXH port and/or built-in regulator EXH port, thereby causing problems.
- 3. In locations which receive direct sunlight, provide a protective cover etc.
- 4. In locations near heat sources, block off any radiated heat.
- 5. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.



Air Supply

- 1. Compressed air, nitrogen, oxygen or argon can be used as a fluid.
- 2. Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this can cause damage or malfunction.
- 3. If oxygen is used as the fluid, it can lead to serious and unforeseen risks. However, it is possible to manage and control the risk of hazards and economic loss. In order to use the product safely, it should only be handled by personnel with appropriate knowledge, with support from a suitably qualified specialist.
- 4. Oxygen gas increases the susceptibility of substances to burning; Oxygen gas can be ignited by frictional heat and static electricity. If oxygen is ignited, the metal and seal materials burn. Therefore, flush the piping thoroughly and mount a suitable filter to prevent foreign matter such as metal powder and dust from entering the product.
- 5. Take safety measures by installing safety devices (e.g. a circuit that stops the supply of oxygen gas) to prevent fire and explosion in the event of failure, taking flameproof safety standards into consideration.
- 6. Since there are some exhaust ports on the product, connect the piping in order to exhaust oxygen. Do not block the exhaust port.



Warranty

KaoLu Enterprise Co., Ltd. products are warranted to the original purchaser only against defects in material or workmanship for 6 months from the date of manufacture. The extent of KaoLu's liability under this warranty is limited to repair or replacement of the defective unit at KaoLu's option. KaoLu shall have no liability under this warranty where improper installation or filtration occurred.